

The toolbox for substation 3-phase testing

Megger.

- Three currents and four voltages
- Stand-alone functionality
- Rugged and reliable for field use
- Generation of 900 V and 105 A in single phase mode
- Secondary and primary testing


DESCRIPTION

The SVERKER 900 Relay and substation test system is the engineer's ultimate toolbox that addresses the increasing need for three-phase testing capability in electrical distribution substations, renewable power generation stations and industrial applications. The intuitive user interface is presented on the LCD touch screen. It has a powerful combination of current and voltage sources and a versatility of measurement possibilities.


The SVERKER900 is specifically designed for basic, manual threephase secondary testing of protection devices. In addition, various primary testing can be performed, since the current and voltage sources can be series- and/or parallel connected to allow for up to 105AAC or 900VAC output. All three current and four voltage sources can be individually adjusted with respect to amplitude, phase angle and frequency. The fourth voltage source allows for testing of numerical relays that needs a reference voltage simulating the busbar.

APPLICATION

- Commissioning and maintenance of distributed and generator power Substation
- Protection relays
 - Electromechanical relays
 - Static relays
 - Numerical relays
 - Self-powered relays
- Plotting current transformer excitation curves
- Current and voltage transformer ratio tests
- Burden measurement for CT circuits
- Polarity (direction) tests
- Impedance measurement
- Primary injection in switchgear
 - Three phase
 - Single phase
- Checking SCADA annunciation and measurement values
- Wiring check
- Relays with current transformer-operated trip release unit

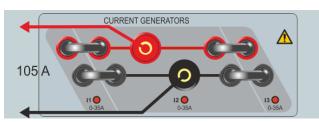

All three current generators in parallel.

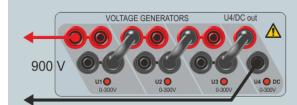

All four voltage generators in series.



1. BINARY INPUTS 1-4

The binary inputs are independently programmable gate circuits that permit simple selection of the desired mode for voltage or contact monitoring operation. Binary input 1 has a selectable threshold voltage.

2. EXTRA TIMER

The timer has separate start and stop inputs, and it can be used to measure both external cycles and sequences initiated by SVERKER. The measured time appears on the display. Each input can be set to respond to the presence or absence of voltage (AC or DC) at a contact.

3. BINARY OUTPUT

The binary output is used to simulate normally open/normally closed contacts for testing breaker failure schemes, or similar power system operations. In addition it may also be used to switch AC/DC voltages and currents.

4. A and V

Current and voltage are measured by the built-in ammeter and voltmeter. Resistance, impedance, phase angle, power and power factor can also be measured. Readings appear on the display. These instruments can also be used to take measurements in external circuits.

5. CURRENT GENERATORS

The current generators can be used separately, in parallel or in series.

The current generators delivers maximum compliance voltage to the load constantly during the test, and range changing is done automatically, on-the-fly, under load.

6. VOLTAGE GENERATORS

The voltage generators can be used separately, in parallel or in series.

7. USB

For external keyboard, mouse, saving test data and for updating internal SW.

- 8. Mains inlet
- 9. Ground (earth) connection
- 10. On/Off switch
- 11. Ethernet port
 - For authorized service actions
- 12. Touch screen

5.7" LCD touch screen


13. Control knob

For setting of current, voltage and other parameter values.

FRONT HMI

The front HMI provide the user with a very simple way to manually or semi-automatic perform the tests, from making a simple primary injection in a switchgear to more complex secondary relay protection testing. The operation is simplified by use of a built-in computer operating system and touch screen.

The front HMI eliminates the need for a computer when testing virtually all types of relay or primary equipment in a substation. Intuitive menu screens and touch screen buttons are provided to quickly and easy select the desired test function. The front HMI includes non-volatile build in data storage for saving tests and test results. By using the USB port, test files/results could be transferred in between the SVERKER 900 and a PC. Test files are saved in csv format for use with Excel® to create reports.

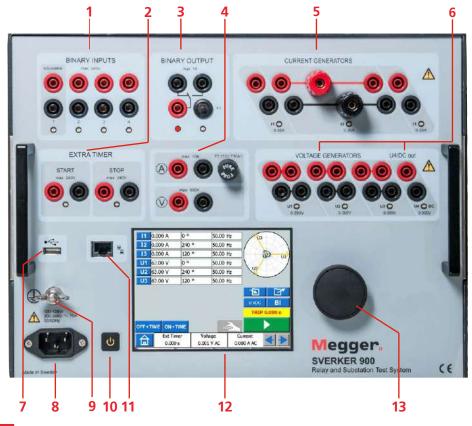

All outputs are independent from sudden changes in mains voltage and frequency, and are regulated so changes in load impedance do not affect the output. All current and voltage sources/ generators are galvanically separated from each other and from ground. All outputs provide variable frequency.

Megger.



TEST INSTRUMENTS

SVERKER 900 contains a range of test instrument to be used depending of what kind of test to perform. Using the different test instruments you can set the output for the voltage and current generators, but also control them with the control knob.

Main instrument

- Timing test
- Manual determine the pick-up and drop-out of relay contact.
- General: set inject measure
- Multiple Timing Test (MTT) To test and verify currents with different amplitudes applied and to measure corresponding tripping times.
- Continuous current mode
 To be used in tests when the current circuit is interrupted repeated times.

CT Magnetization instrument

• Test to determine the knee point voltage of the current transformer.

Prefault – Fault instrument


- Timing test to be used mainly to test relay which require a simulation of a prefault state before the fault simulation.
- Multiple Timing Test (MTT) with reference curve (IDMT) Inverse Definite Minimum Time.
 To test and verify currents with different amplitudes applied and to measure corresponding tripping times.
- Reference curves accoring to IEC60255-151:2009 "Functional requirements for over/under current protection".

Ramping instrument

- Automatic determine the pickup threshold
- Time testing, e.g. when testing df/dt relays
- Frequency ramp according to IEC 60255-181:2019 "Functional requirements for frequency protection".

Sequence instrument


Simulation of sequences e.g. auto recloser, motor starts, re-striking earth fault.

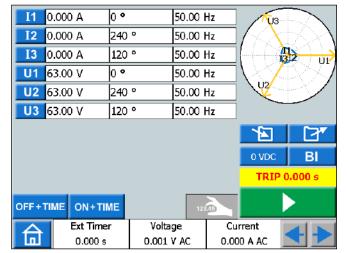


From the Main instrument you easily run the general tests.

Impedance instrument

- The impedance screen allows to test relays directly from the so called impedance plane, where the conversion from the impedance into voltages and currents is automatically done by SVERKER 900.
- Prefault and fault test
- Impedance ramping

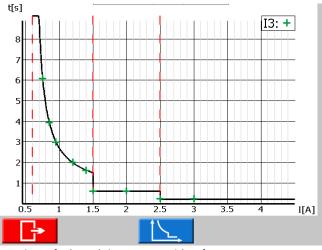

MTT in Prefault-Fault instrument with reference curve.

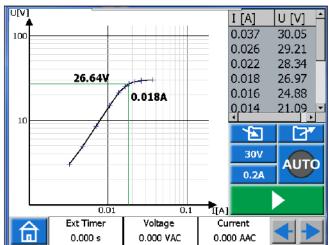

Run the CT Magnetization instrument in auto or manual mode.

Megger.

SVERKER 900 Relay and substation test system

PROTECTIVE RELAY TESTING


SVERKER 900 is performing a wide area for manual secondary testing of protective relay equipment. Virtually all types of singlephase and three-phase protection can be tested, from modern multifunction relays to electromechanical relays. It can inject current up to 105 A when high range is needed and it has a frequency range from 10Hz up to 600 Hz and also DC could be utilized. In the "expert mode" the user have the possibility to add layers of superimposed frequency. The rugged hardware design is built for field use over a wide temperature range, with intelligent software to perform rapid testing.

Examples of what SVERKER 900 can test	ANSI [®] No.
Distance protection / under impedance relay	21
Overfluxing relays	24
Synchronising or synchronism-check relays	25
Undervoltage relays	27
Directional Power relays	32
Undercurrent or underpower relays	37
Loss of field relays	40
Negative sequence overcurrent relays	46
Phase sequence voltage relays	47
Thermal relays	49
Overcurrent- / ground fault relays	50 (N)
Inverse time overcurrent-/ ground fault relays	51 (N)
Power factor relays	55
Overvoltage relays	59
Voltage or current balance relays	60
Directional overcurrent relays / ground fault relay	67 (N)
Motor overload protection	66
DC overcurrent relays	76
Phase-angle measuring or out-of-step protection relays	78
Automatic reclosing devices	79
Frequency relays	81
Carrier or pilot wire	85
Differential protection relays (differential circuits)	87
Directional voltage relays	91
Voltage and power directional relays	92
Tripping relays	94

APPLICATION EXAMPLE

IMPORTANT!

Read the User's manual before using the instrument. The connection shows a general configuration that applies to most types of relay testing.

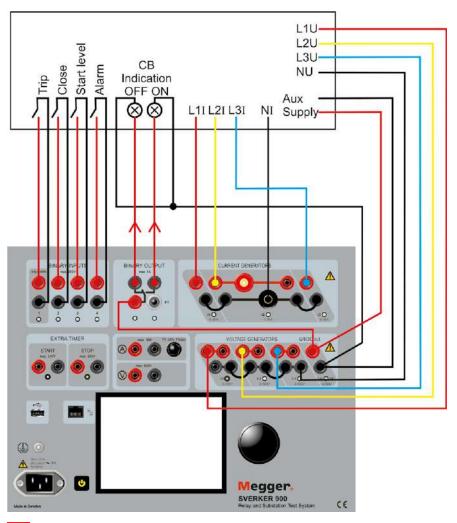



Specifications are valid for resistive load, at 170-240 voltage supply and ambient temperature +25°C ±3°C, (77°F ±5.4°F) after 30 minutes warm up time and in the frequency range 15 Hz to 70 Hz. All hardware data are for full scale values. Specifications are subject to change without notice.

Environment

Application field	For use in high-voltage substations and industrial environments.
Temperature	
Operating	0°C to +50°C (32°F to +122°F)
Storage & transport	-40°C to +70°C (-40°F to +158°F)
Humidity	5% – 95% RH, non-condensing
Altitude (operational)	2000 m (6500 ft)
CE-marking	
LVD	2014/35/EU
EMC	2014/30/EU
RoHS	2011/65/EU
Classifications and	d standards
Shock and vibration	IEC 60068-2-27

IEC 60068-2-6

IEC 60255-181:2019

Shock and vibration Vibration Voltage frequency ramp

General

General	
Mains input	100 - 240 V AC, 50 / 60 Hz
Current consumption	10 A (max)
Power consumption	1800 VA (max)
Dimensions	
Instrument	350 x 270 x 220 mm (13.8" x 10.6" x 8.7")
Flight case with wheels	615 x 295 x 500 mm (24.2" x 11.6" x 19.7")
Flight case	620 x 295 x 365 mm (24.4" x 11.6" x 14.4")
Weight	15.2 kg (33.5 lbs) Instrument only 29.2 kg (64.4 lbs) with accessories and flight case (with wheels, GD-00185) 24.1 kg (53.1 lbs) with accessories and flight case (GD-00182)
Display	5.7" LCD Touch screen
Available languages	Czech, English, French, German, Spanish, Swedish

Measurement section

BINARY INPUTS 1, 2, 3, 4 and EXTERNAL TIMER

Start/Stop Number 6 Туре Dry or wet contacts max, 240 VAC or 340VDC **Galvanic Isolation** Galvanically separated Max measuring time 35 minutes **Debounce filter** Settable, 0 to 999 ms **BINARY INPUT 1** Adjustable threshold and hysteresis Timer

Range	Inaccuracy
0 – 50 ms	≤ 1 ms
50 – 500 ms	≤ 2 ms
> 500 ms	≤ 1%
Resolution	1 ms

Voltmeter Measurement method: AC true RMS, DC mean value Insulation 900 V, 1273 Vpeak 900 V Input rating Inaccur Ranges D 0-1 V 0-10 V 0-100 \ 0-900 V Ranges / 0-1 V 0-10 V 0-100 V 0-900 \ Resolution Frequen Range Inaccur Resolut Amme Measure Inaccur Ranges D 0-200 n 0-1.5 A 0-10 A Ranges / 0-200 n 0-1.5 A 0-10 A Resolution

Extra measurements

Power factor and phase angle measurements	Power factor and phase a	angle measurements
---	--------------------------	--------------------

	Ranges	Resolution	Inaccuracy
Power factor cos ϕ	-0.01 (cap) to 1 to +0.01 (ind)	< 0.01	<0.04
Phase angle (°) ¹⁾	0° - 360°	<0.1°	<0.8°
Impedance and power measurement			

impedance and power measurement				
AC	$Z(\Omega), R(\Omega), X(\Omega), P(W), S(VA), Q(VAR)$			
DC	R(Ω), P(W)			
Range	Up to 999 kX (X=unit)			
1) Valid with current >1 A a	nd voltage >10 V			

BINARY OUTPUTS

Insulation	250 V AC
Current	1 A (max)
Voltage	250 V AC or 120 V DC

Inaccuracy	
Ranges DC	
0-1 V	±0.5% of reading + 3 mV
0-10 V	$\pm 0.5\%$ of reading + 7 mV
0-100 V	$\pm 0.5\%$ of reading + 30 mV
0-900 V	$\pm 0.5\%$ of reading + 300 mV
Ranges AC	10.5% of reading + 500 m
0-1 V	±1% of reading + 5 mV
0-10 V	±1% of reading + 10 mV
0-100 V	±1% of reading + 50 mV
0-900 V	±1% of reading + 300 mV
Resolution	1 mV
Frequency	
Range	10 Hz – 600 Hz
Inaccuracy	< 0.01%
Resolution	< 10 mHz
• •	
Ammeter	
	I: AC true RMS, DC mean value
	l: AC true RMS,DC mean value
Measurement method	l: AC true RMS, DC mean value
Measurement method Inaccuracy	1: AC true RMS, DC mean value ±0.5% of reading + 2 mA
Measurement method Inaccuracy Ranges DC	
Measurement method Inaccuracy Ranges DC 0-200 mA	±0.5% of reading + 2 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA 0-1.5 A	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA ±1% of reading + 3 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA 0-1.5 A 0-1.5 A 0-10 A	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA ±1% of reading + 3 mA ±1% of reading + 20 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA 0-1.5 A 0-10 A Resolution	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA ±1% of reading + 3 mA ±1% of reading + 20 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA 0-1.5 A 0-10 A Resolution Frequency	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA ±1% of reading + 3 mA ±1% of reading + 20 mA 0.1 mA
Measurement method Inaccuracy Ranges DC 0-200 mA 0-1.5 A 0-10 A Ranges AC 0-200 mA 0-1.5 A 0-10 A Resolution Frequency Range	±0.5% of reading + 2 mA ±0.5% of reading + 3 mA ±0.5% of reading + 10 mA ±1% of reading + 2 mA ±1% of reading + 3 mA ±1% of reading + 20 mA 0.1 mA 10 Hz - 600 Hz

Megger





Generation section

Voltage generators

Voltage outputs U1, U2, U3 and U4/DC out All voltage sources/generators are galvanically separated from each other and from ground. Floating common return is made by using jumper connectors

is made by using jumper connectors
4 x 300 V
4 x 300 V
4 x 125 VA (max)
4 x 125 W (max)
0.03% of reading + 0.01% of range
0.05% of reading + 0.03% of range
< 0.14% typical (0.25% max)
10 mV
0° - 360°
< 0.5° (at 50 and 60 Hz)
0.1°
10 Hz - 600 Hz
<0.03 % (45 Hz-66 Hz)
1 mHz

1) THD+N: Values at 50/60 Hz, 200-300 V, ≥1500 Ω load. Measurement band with 22 Hz-22 kHz.

2) The specification is valid for resistive load >2000 Ω for voltage output separately U1,U2, U3 and U4/DC out.

Voltage generators in single-phase mode, AC or DC			
4 Voltage generators	Voltage	Power (max)	Current (max)
in parallell:	300 V	375 VA	1.2 A
U1 // U2 // U3 // U4	100 V	300 VA	3.0 A
	67 V	300 VA	4.5 A
	External load	d: min 7 Ω	
3 Voltage generators	Voltage	Power (max)	Current (max)
in parallell:	300 V	312 VA	1.0 A
U1 // U2 // U3	100 V	250 VA	2.5 A
	67 V	250 VA	3.7 A
	External load: min 9 Ω		
4 Voltage generators	Voltage	Power (max)	Current (max)
in series:	900 V	450 VA	0.5 A
U1 – U2 – U3 – U4	400 V	360 VA	0.9 A
	268 V	350 VA	1.3 A
	External load: min 100 Ω		
3 Voltage generators	Voltage	Power (max)	Current (max)
in series:	900 V	350 VA	0.4 A
U1 – U2 – U3	300 V	280 VA	0.9 A
	200 V	275 VA	1.4 A
	External load	d: min 75 Ω	

Current generators

Current outputs I1, I2 and I3 All current generators are galvanically separated from each other and from ground Floating common return, is made by using jumper connectors Range 3-phase AC 3 x 35 A At least 15 repetitions: 10 s ON and 20 s OFF 3-phase DC 3 x 35 A At least 15 repetitions: 10 s ON and 20 s OFF 3-phase AC 3 x 20 A continuous 3-phase DC 3 x 20 A continuous Power 3-phase AC (max) 3 x 277 VA 3-phase DC (max) 3 x 275 W

Inaccuracy AC

	Range		Error
	<200 mA 200 mA to 35 A		<0.5 mA
Typical			0.1% of reading+0.01% of range
	<200 mA 200 mA to 35 A		<3 mA
Guaranteed			0.4% of reading+0.01% of range
Distortion(THD	D+N)⁴⁾ < 0.10% typ		ical (0.20% max)
Resolution		1 mA	
Compliance vo	oltage ≤50 Vrms		
Phase			
Angle range		0° - 360°	
Inaccuracy ⁵⁾		< 0.2° (at 50 and 60 Hz)	
Resolution		0.1°	
Frequency			
Range		10 Hz - 600 Hz	
Inaccuracy ⁵⁾		< 0.03 % (45 – 66 Hz)	
Resolution		1 mHz	

4) THD+N: Values at 50/60 Hz, 1-5 A, 0.5 VA load. Measurement band with 22 Hz-22 kHz.

5) The specification is valid for resistive load \leq 0.08 Ω and I \geq 0.15 A.

Current generators in single-phase mode, AC							
Current generators in parallel: I1 // I2// I3							
Current	Power (max)	Voltage (max)	Duty cycle				
2.6 A	198 VA	76 V	Continuous				
16 A	816 VA	51 V	Continuous				
26.5 A	827 VA	31.2 V	Continuous				
45.5 A	819 VA	18 V	Continuous				
60 A	800 VA	14 V	Continuous				
105 A	721 VA	7 V	At least 15 rep- etitions: 10 s ON and 20 s OFF				
Current generators in series: I1 – I2 – I3 6)							
Current	Power (max)	Voltage (max)	Duty cycle				
2.5 A	403 VA	161 V	Continuous				
8.2 A	860 VA	105 V	Continuous				
17.6 A	827 VA	47 V	Continuous				
6) Max 18 A and 70 Hz							

Optional accessories

Low current adapters LCA1 and LCA2

Dimensions

 LCA1
 110 x 64 x 28 mm (4.3" x 2.5" x 1.1")

 LCA2
 110 x 64 x 44 mm (4.3" x 2.5" x 1.7")

 Weight (LCA1+LCA2)
 0.4 kg (0.9 lbs)


 Input
 5 A (max)

OPTIONAL ACCESSORIES


SVERKER Viewer

PC software which can create graphical test

reports in pdf format. The pdf test report is created by opening a saved test file, on a USB stick, from SVERKER 900.

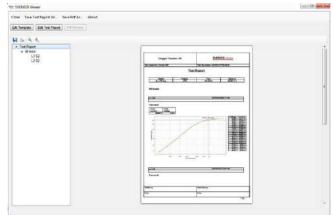

Pdf test report from determine the knee point voltage of the current transformer.

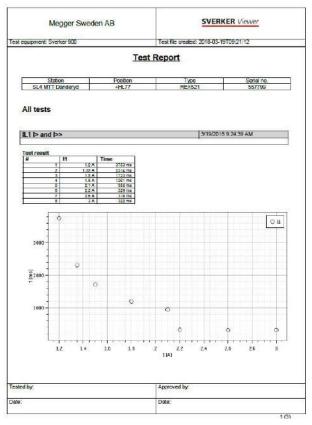

PDF report from a timing test of overcurrent protection.





For generation of low currents (0–30 mA) when testing protection such as sensitive earth fault, capacitor unbalance and reverse power protection.



Calibration Box (CR-91010)


To make a calibration a digital multimeter with high accuracy is also needed, e.g. the KEYSIGHT 34479A or equivalent.

INCLUDED ACCESSORIES



Test cable set standard (GA-00030)



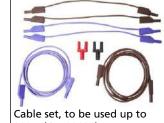

Earth (ground) cable (GA-00200)

Cable set, to be used up to 900 V (GA-00036)



Flight case with wheels (GD-00185)



Inside the lid are ten jumpers "parked" in holders, a touch screen, a pen and the quick guide.



Soft case Combi (GD-00900)

Postal address

Megger Sweden AB Box 724 SE-182 17 Danderyd SWEDEN

T +46 8 510 195 00 E seinfo@megger.com

SVERKER-900_DS_en_V17

ZI-CR01E • Doc. CR0271RE • 2022 Subject to change without notice Megger Sweden AB Registered to ISO 9001 and 14001 The word 'Megger' is a registered trademark

www.megger.com

ORDERING INFORMATION

Item				Cat. No.			
SVERKER 900 Basic	CR-19090						
SVERKER 900 Stand	CR-19092						
SVERKER 900 Exper	CR-19094						
SVERKER 900 Stand	CR-19192						
Instrument configuration table							
Instrument	Basic	Standard	Expert				
Main Prefault - Fault	Х	х	х				
Ramping Sequencer CT Magnetization		х	x				
Impedance			Х				
Prefault-Fault with MTT		х	х				
Prefault - Fault with MTT and reference curves		X ¹⁾	X ¹⁾				
1) Requires SVERKER Viewer Licence							
Included accessories for all above							
Test cable set standar Earth (ground) cable Cable set 900 V Flight case with whee 2) Flight case is chang							
Optional accessories							
SVERKER Viewer PC SoftwareCR-8101XWhen ordering to an existing SVERKER 900, Please specify the serial number.The license key is individually related to the serial number of the SVERKER 900. The test files need to be licensed to be able to open with SVERKER Viewer. The SVERKER Viewer software itself, can be installed on unlimited number of PC's.							
Flight case	GD-00182						
Soft case Combi	GD-00900						
Low current adapte	CR-90010						
Calibration box	CR-91010						

